

 
SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

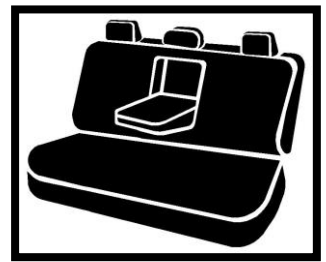

INSTALLATION INSTRUCTIONS  
FOR

**NP92-59/ OE32-59/ SL62-59/ SP82-59/ TR42-59/ TRS42-59**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER**

- 1) Remove headrest (see note)
- 2) Remove seat belt buckle from elastic holder
- 3) Release backrest from the back wall by pulling the tab on backrest
- 4) Slip cover over backrest. Ensure cover is installed under seat belt
- 5) Smooth cover tightly from top to bottom. Cover has armrest opening
- 6) Tuck bottom of cover through crevice under backrest
- 7) Locate straps and secure to buckles on cover
- 8) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note)
- 9) Repeat on left side
- 10) Replace previously removed seat belt buckle to elastic on cover
- 11) Make sure armrest opening is aligned with armrest.
- 12) Adjust all straps, buckles and velcro to equalize tension and ensure a snug fit
- 13) Re-install headrests (see note)

**B) CUSHION COVER**

 
- 1) Center cover on the seat
- 2) Tuck back flap through crevice
- 3) Lift seat and pass straps under seat and buckle
- 4) Pass side straps and buckle
- 5) Adjust straps and buckles to equalize tension and ensure a snug fit

**C) ARMREST COVER**

- 1) Fold down armrest
- 2) Undo velcro closure on cover
- 3) Slip cover over armrest and re-attach previously undone velcro.
- 4) Position adhesive velcro supplied to align with velcro on cover
- around the edge of cupholder. **NOTE: BEFORE POSITION VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 5) Adjust all velcro to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

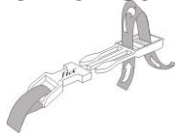


**3) RE-INSTALLATION OF HEADRESTS**


- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

 - Push in side release buttons
- Lift off
- (If unable to remove consult dealership)

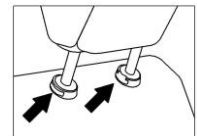

**4) BOTTOM FLAP INSTALLATION**

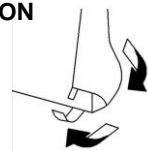 

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

