

INSTALLATION INSTRUCTIONS


PRO-MOD SKID PLATE



APPLICATION:
2019 Ford Ranger
PART NUMBER:
58-71085

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	LOWER SKID PLATE	17MM SOCKET
2	1	DRIVER FRAME BRACKET	17MM WRENCH
3	1	PASSENGER FRAME BRACKET	19MM SOCKET
4	1	REAR FRAME BRACKET	19MM WRENCH
5	3	M12 BOLT PLATE	RATCHET
6	4	M12 HEX HEAD BOLT	TORQUE WRENCH
7	7	M12 HEX NUT	
8	7	M12 SPLIT LOCK WASHER	
9	11	M12 FLAT WASHER	
10	7	M10 BUTTON HEAD BOLT	
11	7	M10 FLAT WASHER	
12	7	M10 SPLIT LOCK WASHER	
13	7	M10 SERRATED FLANGE NUT	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

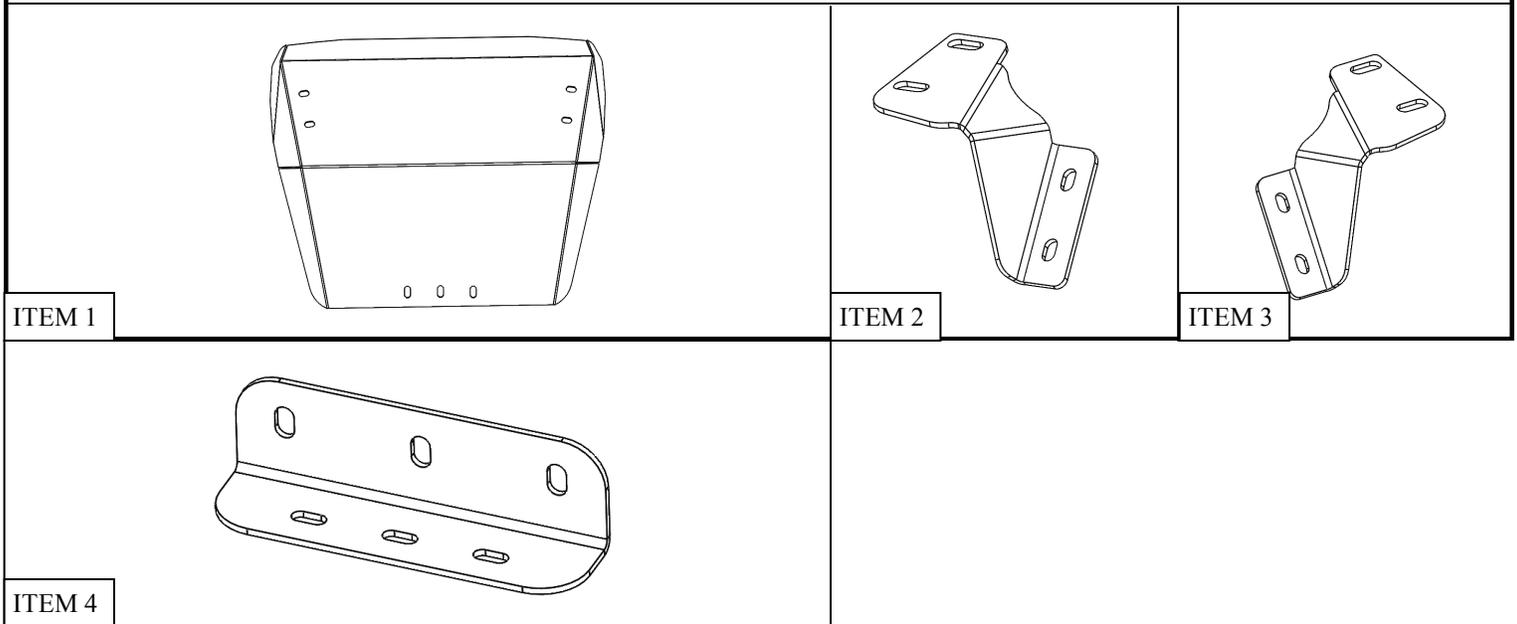


PROCEDURE


1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.

Failure to identify damage before installation could lead to a rejection of any claim.




2. Attach all brackets (2-4) loosely to lower skid plate using the supplied M10 Hardware. **See Figure 1.** *Note: All Brackets (2-4) mount in similar way.*

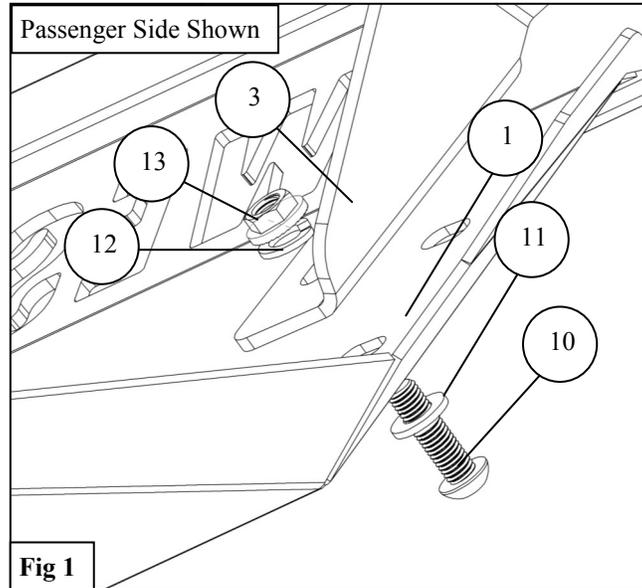

3. In order to re-install factory tow hooks, a small edge must be ground off for a correct fitment. Grind off the specified location. *Note: If your vehicle does not have factory tow hooks, proceed to the next step.* **See Figure 2 for modified tow hook.**

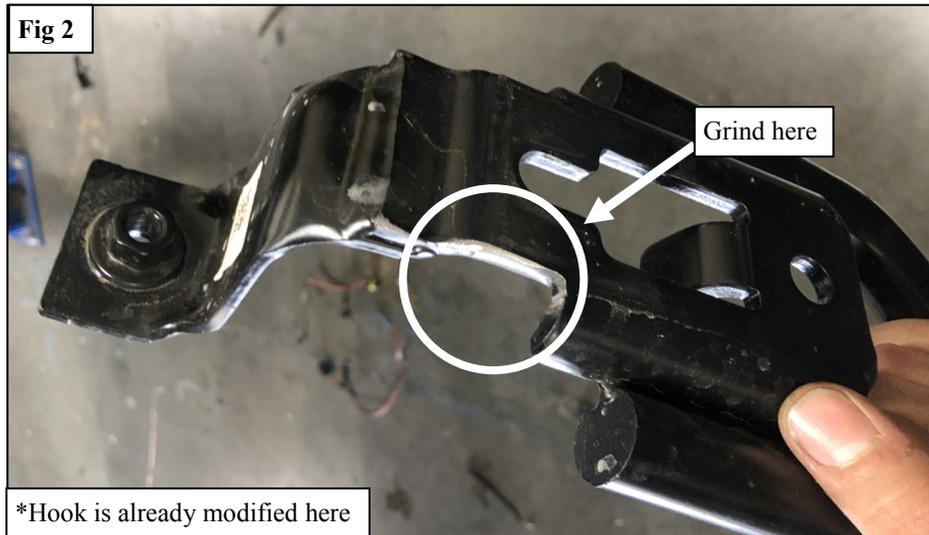

4. Install M12 Bolt Plates (5) into the cross member. **See Figure 3.**
5. Raise Lower Skid Assembly up to the mounting locations. Loosely install the assembly using the supplied M12 hardware.
Note 1: Factory tow hooks will go under the skid plate brackets at this time. Note 2: All hardware mounts in a similar way. See Figures 3 –5.

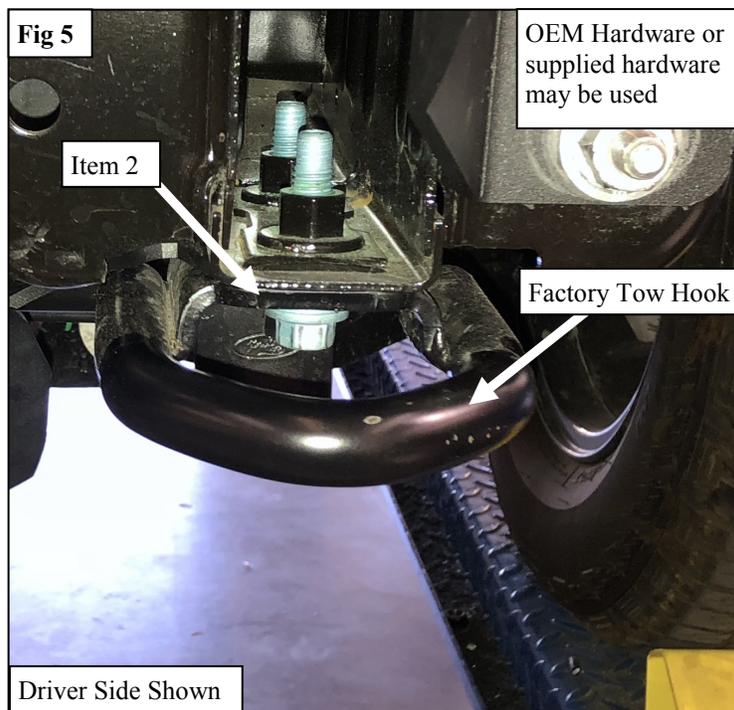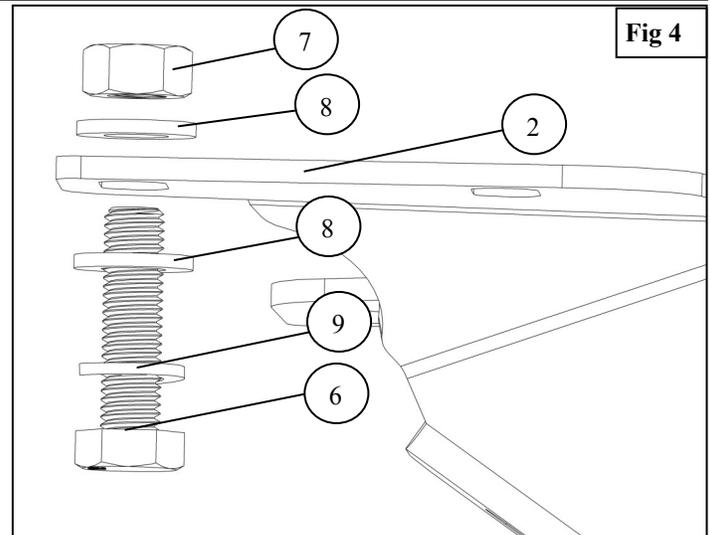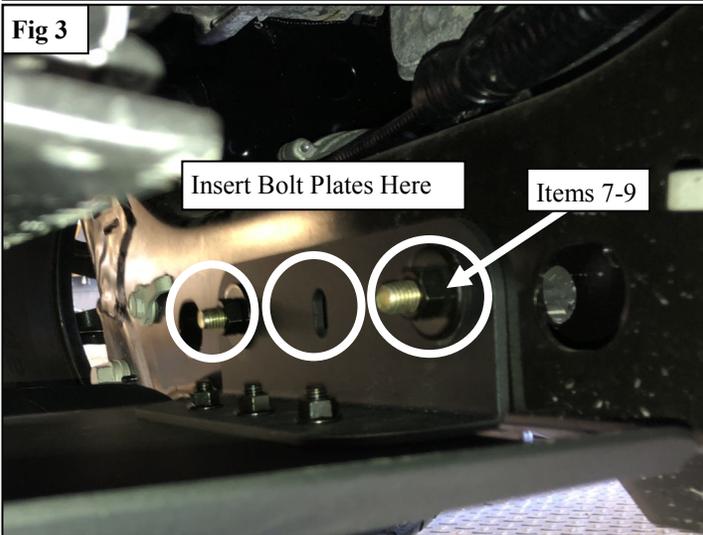

6. Align and tighten all hardware as specified: M10 to 38 ft-lbs, M12 to 65 ft-lbs

INSTALLATION COMPLETE



Shown with Pro-Mod Bumper

Bumper and Lights sold separately



Shown with Stock Bumper

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER

WESTIN Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773