

INSTALLATION INSTRUCTIONS


PRO-MOD SKID PLATE



APPLICATION:
2015-2019 Chevrolet Colorado
PART NUMBER:
58-71155

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	SKID PLATE	13MM SOCKET
2,3	2	SKID PLATE BRACKET (1 DRIVER, 1 PASSENGER)	13MM WRENCH
4	2	M10 BOLT PLATE	17MM SOCKET
5	8	M8 U-CLIPS	17MM WRENCH
6	8	M8 BUTTON HEAD BOLTS	RATCHET
7	8	M8 FLAT WASHERS	TORQUE WRENCH
8	8	M8 SPLIT LOCK WASHERS	
9	2	M10 FLAT WASHER	
10	2	M10 SPLIT LOCK WASHER	
11	2	M10 SERRATED FLANGE HEX NUT	


ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

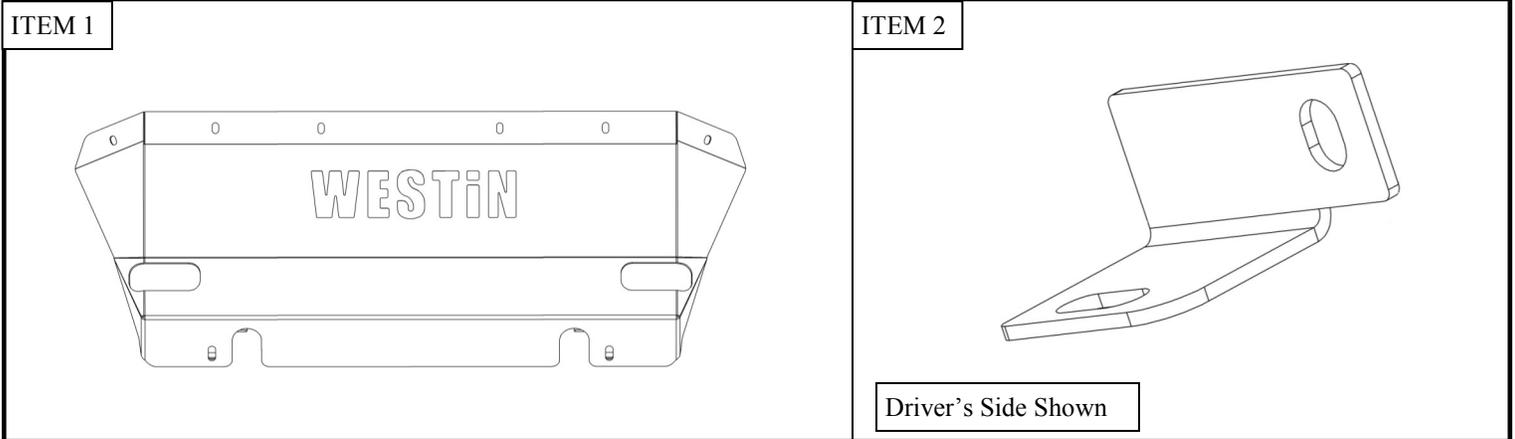



PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.

2. Attach the M8 U-Clips (5) to the pre-installed Pro-Mod Bumper (sold separately) in the locations shown in **Figure 1**.

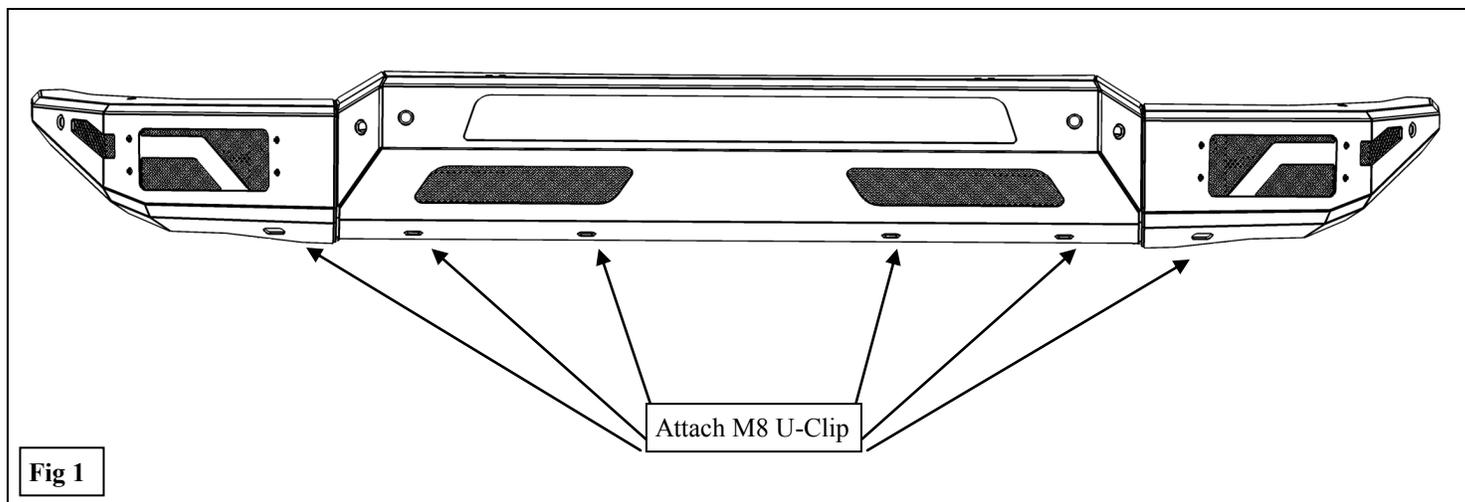


3. Insert the M10 bolt plates through the backside of the cross member.
4. Attach the skid plate brackets (2, 3) using the supplied M10 Hardware.

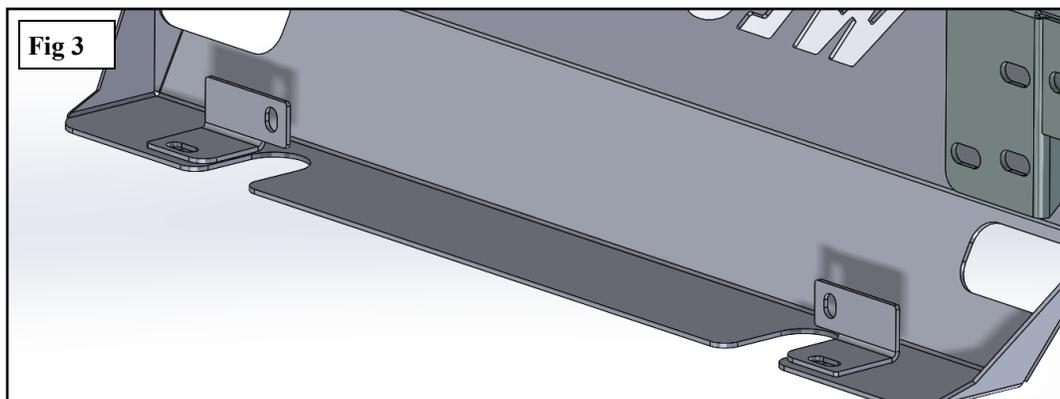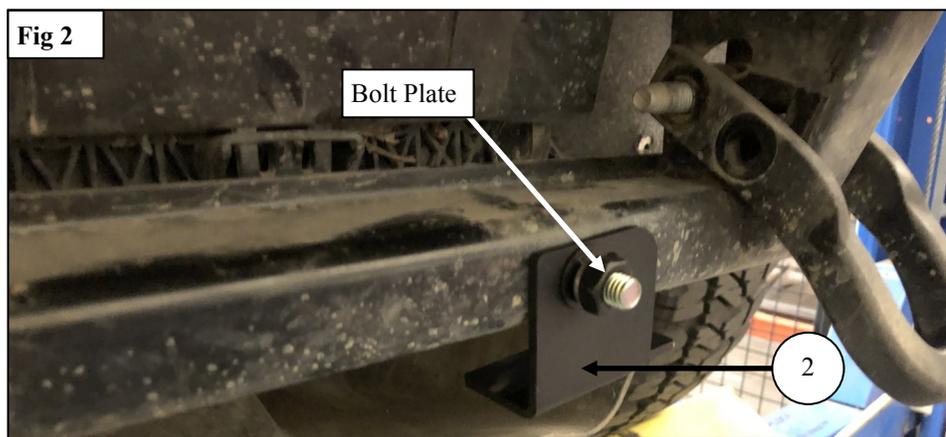

5. Attach two M8 U-Clips on to the skid plate brackets See Figure 4.



6. Loosely attach the skid plate to the bumper and brackets via the U-clips (2,3) with the supplied M8 hardware. See Figure 5.

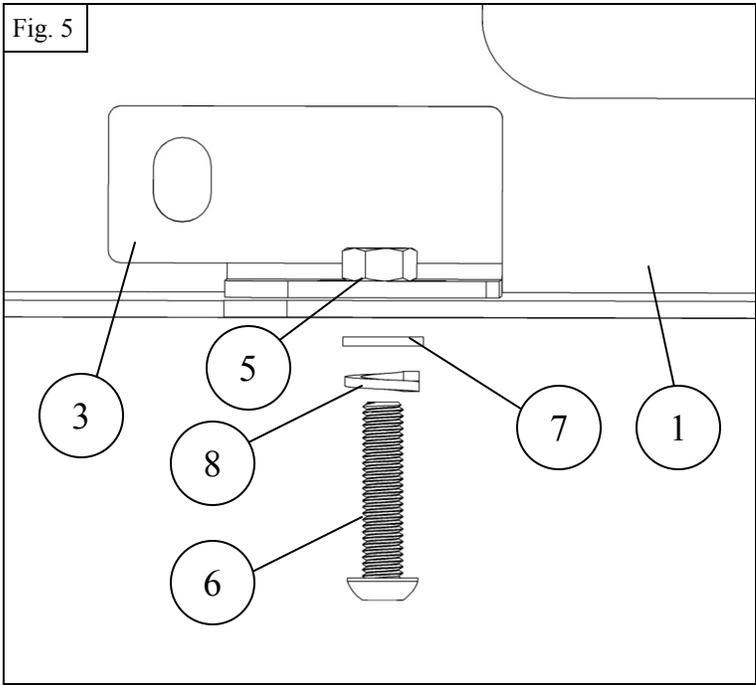

7. Align and tighten all hardware as specified: M8 to 18 ft-lbs, M10 to 35 ft-lbs.

INSTALLATION COMPLETE



Bumper and Lights sold separately

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER

WESTIN Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773