




INSTALLATION INSTRUCTIONS

2016 Polaris RZR Turbo
Single Side Exit Stainless Steel Exhaust
PART #98027

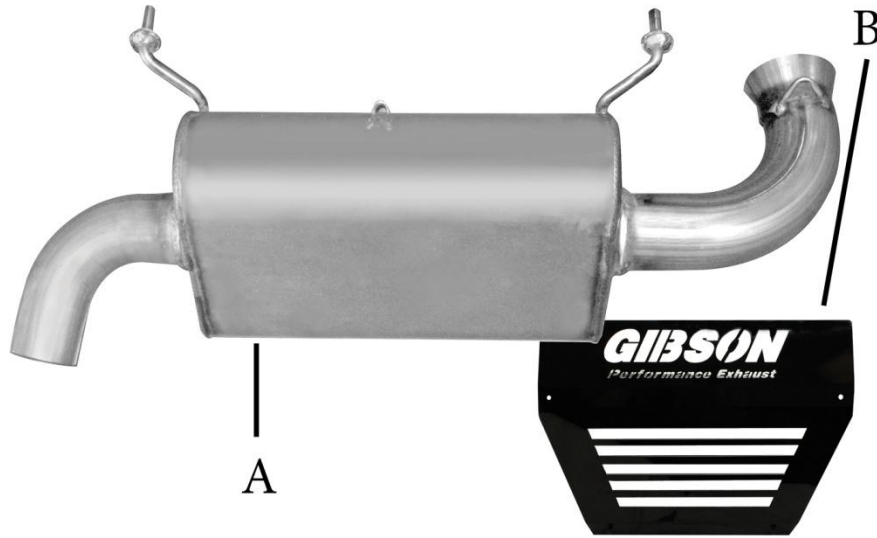

ITEM	PART #	QTY	DESCRIPTION
A	999700897S	1	MUFFLER ASSEMBLY
B	999700806-B	1	GIBSON BACK PLATE

Thank you for purchasing our Gibson Exhaust system for your vehicle.
If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044
Monday through Friday, 8:00 am to 5:00 pm. 09/15

EXHAUST INSTALLATION

PART# 98027


WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE VEHICLE, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES.

DO NOT WORK WITH HOT PIPES!!!

1. Disconnect the negative battery cable before removal of the OEM Exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. Remove the factory exhaust by unbolting the factory rear heat shield bumper behind the factory muffler. You will re use the hardware for the Gibson install. Disconnect the 4 factory springs and remove the factory exhaust. Do not damage the factory exhaust gasket. You will re use this gasket.



2. Once you have removed the heat shield loosen the factory exhaust. Unbolt the headpipe entirely and remove the factory exhaust.

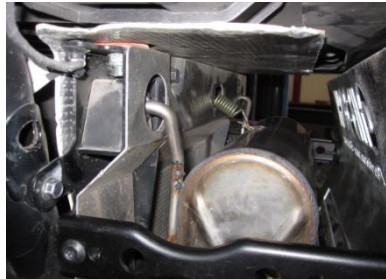

3. Next install the Gibson Muffler assembly. Install the top hanger mounts first then slide the inlet over the factory head pipe reusing the factory head pipe bolts to tighten the flange. Once in position, tighten the position by using the springs.



4. Install rear Gibson beauty plate. Use the factory bolts to install. Once they have been installed tighten the Gibson brackets at the rZR frame. Adjust plate for a level finish.



7. Once everything has been installed. Double Check all connections and be sure there is a 1" clearance from all major components. Make sure that everything is tightened and then go have fun!

"MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC..."