




232 North Branford RD.
North Branford, CT 06471
Orders: 203.481.9460
Tech: 203.481.9943
Fax: 203.481.9641

Product Instructions

#80-059
4.6 / 5.4 WATERNECK

- 1) Remove the 4 bolts for the coolant crossover U brace shown below.**
- 2) Slide the brace backwards and out of the way.**
- 3) Remove the coolant hose. (Note: some coolant will spill)**
- 4) Remove 2 bolts holding waterneck in place.**
- 5) Pull off old waterneck and replace with new waterneck.**
- 6) Reverse the steps completed to remove waterneck.**
- 7) Double check all bolts and fittings.**
- 8) Get engine up to temperature and check for leaks.**

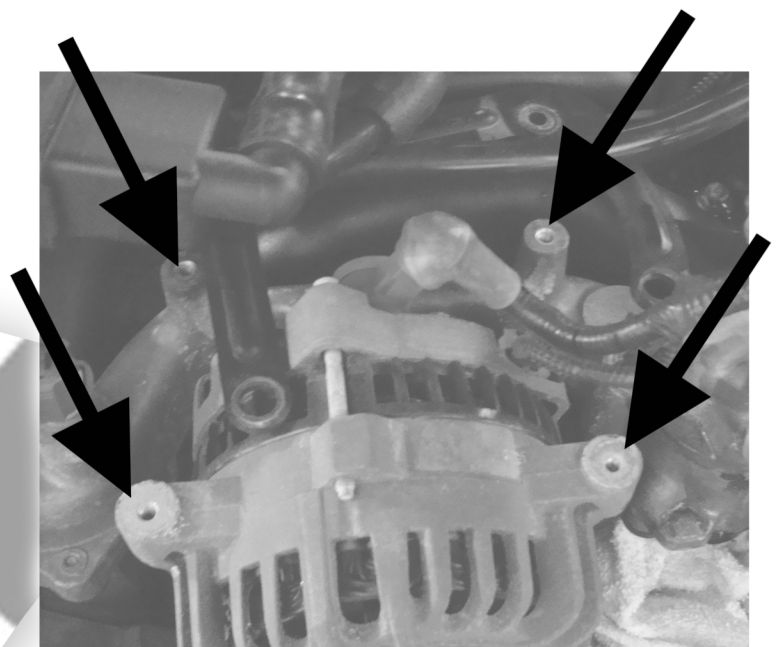

www.CantonRacingProducts.com