




232 Branford Rd.
North Branford, CT 06471
Orders: 203.481.9460
Tech: 203.481.9943
Fax: 203.481.9641

Product Instructions

GM LS1 BILLET WATER NECKS

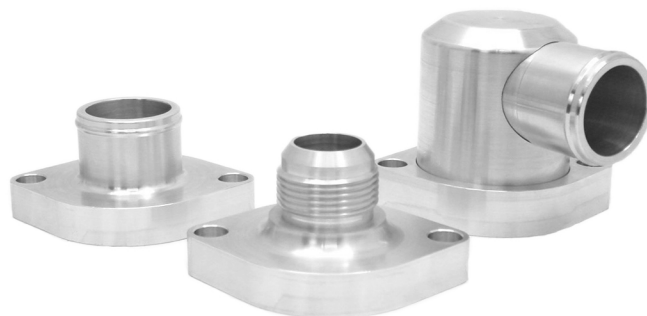

Note: These waternecks are designed to work with the 2006 corvette thermostat.

GM Part number: # 12600171

Allow engine to cool completely before performing any cooling system service.

1. Drain coolant from engine and remove coolant hose and the existing water neck from the block.
2. Remove the thermostat from the existing water neck. Clean the thermostat and check to make sure the rubber gasket around the edge is in good condition, your water neck seals to the block on this gasket.
3. To install the thermostat with your new billet water neck you will need to trim the small tab that extends off the thermostat gasket shown in the photo below. This can be done using a razor blade.
4. Insert the thermostat into the billet water neck, using your fingers to seat the rubber gasket evenly into the opening in the water neck.
5. Install the water neck on to the block using the supplied stainless hardware.

