


T5154

2015-UP CHEV/GMC 2500/3500 DURAMAX, 5"-6" ANGLED ROLLED END TIP

MBRP

18-JAN-2024

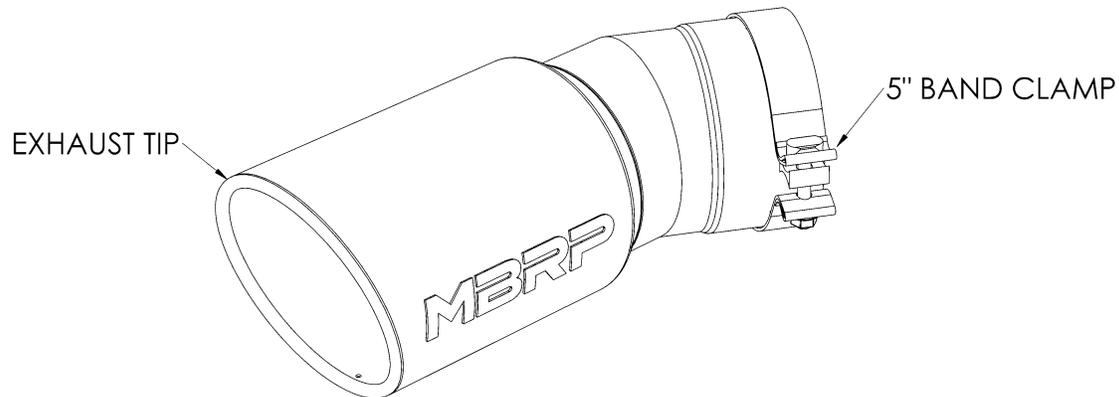

PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that this component is of superior quality and properly packaged. It is the installer's responsibility to ensure that the component is complete, including any additional hardware and that it is undamaged. This should be done prior to the removal of factory components. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.

Installation Instructions:



Figure 1

1. Mark around the stock tail pipe 3" from the end of the vent.
Refer to Figure 1.

2. Cut the stock tail pipe off using a reciprocating saw (make sure cut is straight all the way around). File off burrs or sharp edges.



Figure 2

3. Install the **5" Band Clamp** onto the **Exhaust Tip** and install on the stock tail pipe. Rotate to desired position (use a level if necessary).
Refer to Figure 2.

4. Tighten the **5" Band Clamp** to approximately 45 lb-ft (60 N-m) of torque. Ensure all clamp connections are secure and components are unable to rotate or slide. Verify clearances, system security and band clamp torque after 30-60 miles (50-100 km) of driving.

Congratulations! You are ready to begin enjoying your new **MBRP** Exhaust Tip.
We know you will enjoy your purchase.