


S5149

2014-UP Ram 2500/3500, HD, 6.4L,
Cat-Back, 4.0" Single Side

MBRP®

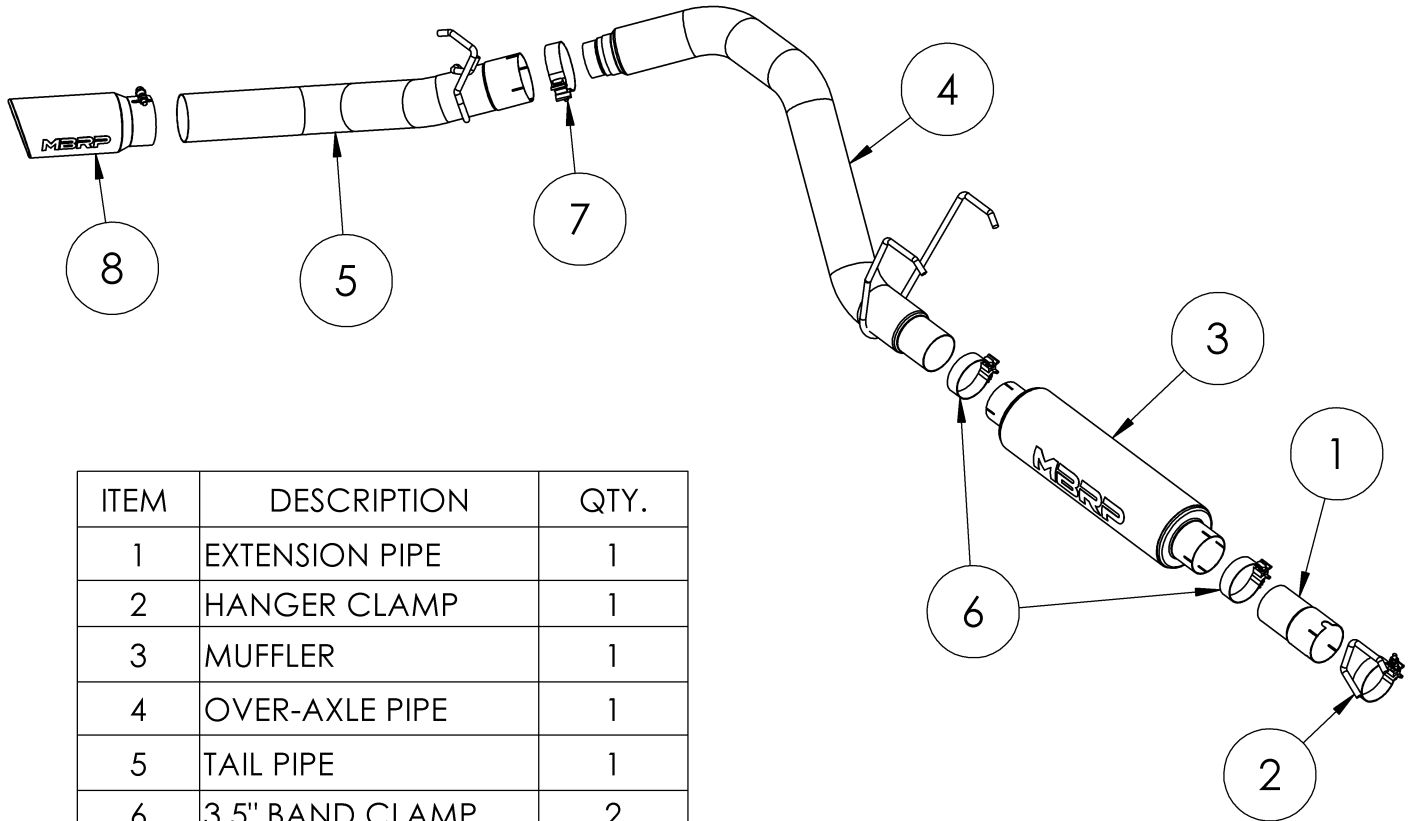

ITEM	DESCRIPTION	QTY.
1	EXTENSION PIPE	1
2	HANGER CLAMP	1
3	MUFFLER	1
4	OVER-AXLE PIPE	1
5	TAIL PIPE	1
6	3.5" BAND CLAMP	2
7	4" BAND CLAMP	1
8	EXHAUST TIP	1

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP



Figure 1

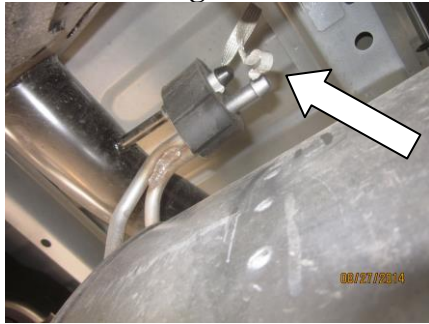


Figure 2



Figure 3



Figure 4



Figure 5

Removal of Stock System:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber isolators.

2. Loosen the nut on the clamp on the factory tailpipe.

Refer to Figure 1.

3. Remove the tail pipe from the OEM muffler then from the OEM rubber hanger. Remove the stock tail pipe from the vehicle. Completely remove the OEM rubber tail pipe hanger to facilitate installation.

4. Loosen the nut on the clamp on the OEM muffler. Remove the ground strap from the passenger side muffler hanger and remove the muffler.

Refer to Figure 2.

Installation of MBRP Performance Exhaust:

1. Install the **Extension Pipe** onto the factory pipe. Take care to ensure the factory locating tab is in the notch.

Refer to Figure 3.

2. Install the **Hanger Clamp** onto the **Extension Pipe** and into the factory isolator.

Refer to Figure 4.

3. Place a **3.5" Clamp** onto the **Muffler inlet**, and install the **Muffler** onto the **Extension Pipe**.

Refer to Figure 5.

MBRP



Figure 6

4. Place a **3.5" Clamp** over the **Muffler** outlet and install the **Over-Axle Pipe** into the **Muffler** and the factory isolators.
Refer to Figure 6.

5. Using the **4" Clamp** install the **Tail Pipe** onto the **Over-Axle Pipe**.
Refer to Figure 7.

6. Install the OEM rubber tail pipe hanger onto the **Tail Pipe** and frame mounts.
Refer to Figure 8.



Figure 7

7. Install the **Exhaust Tip** onto the **Tail Pipe** and adjust to your liking.
Refer to Figure 9.

8. Tighten all hardware and clamps, starting at the front and working rearward to secure the system. Check along the full length of the exhaust system to ensure there is adequate clearance for fuel lines, vent lines, brake lines, frame, bodywork, suspension and any wiring, etc. If there is any interference detected, relocate or adjust to provide adequate clearance. Ensure all clamp connections are secure and components are unable to rotate or slide. Band clamps require approximately 45 lb-ft (60 N-m) of torque. Verify clearances, system security and band clamp torque after 30-60 miles (50-100 km) of driving.



Figure 8



Figure 9



Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your **MBRP** performance exhaust system. We know you will enjoy your purchase.