




INSTALLATION INSTRUCTIONS



2012 MINI ROADSTER 1.6L TURBO | PART NO. 15209

BILL OF MATERIALS:

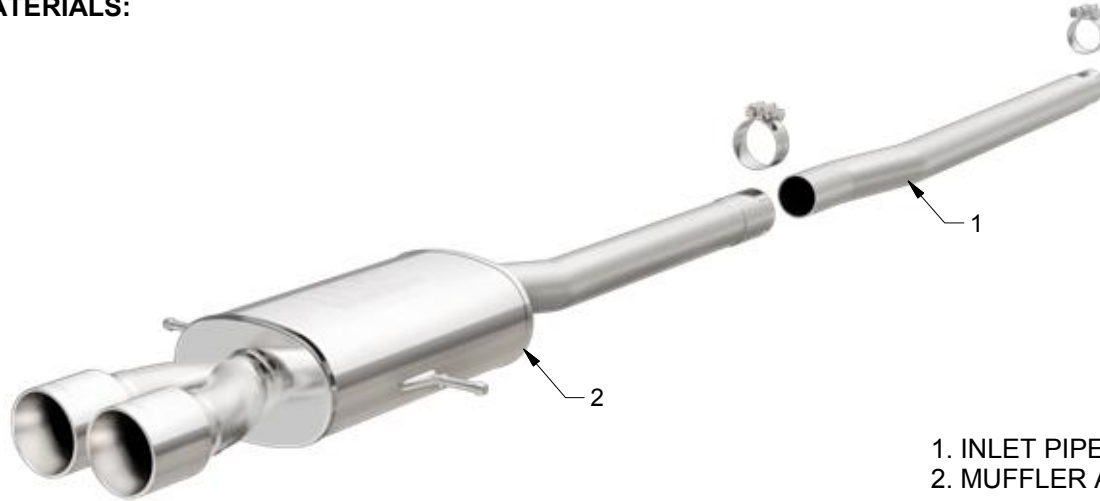

- 1. INLET PIPE
- 2. MUFFLER ASSEMBLY



WEAR SAFETY GLASSES



READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

- 1.[1] 2.25" Clamp
- 2.[1] 2.50" Clamp

MINIMUM REQUIRED TOOLS:



15mm
10mm
T-50 Torx



Hanger Tool
(Or Pry Bar)



Cutting Device

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 30-35 ft-lbs for U-bolt clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW 1901 Corporate Centre Dr., Oceanside CA 92056
Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com