

14885 Monte Vista Avenue Chino, Ca. 91710 888.360.3696



## Read complete instructions before installation! Improper installation may void warranty

Description: Tail light
Part Number: 321060-321061-321062
Application: 2005-2007 Scion TC



Tools Needed: Flat head screw driver Phillip screw driver 10 mm socket 8mm deep socket 8mm wrench



Step 1: Open the truck expossing the top of the bumper to remove the two phillip screws located at either end.



Step 3: Remove the two phillip head srews from the mud guard. Repeat step for passenger side.



Step 4: Remove the plastic phillip head screw located undernieth the mud guard.

Repeat step fpr passenger side.



Step 5: Remove the plastic push pins located undernieth the bumper.




Step 6: Remove the 10 mm. Repeat step for passenger side.



Step 7: Pull the side of the bumper off. Repeat step for passenger side.



Step 8: Pull the bumper straight out.

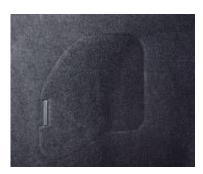

Step 9: Remove the carpet pieces to expose the back side of the taillights.

Repeat step for passenger side.



Step 10: Unplug the wire harness from the taillight assembly.

Repeat step for passenger side.



Step 11: Remove the two 8 mm nuts located at the bottom of the taillight assembly.

Repeat step for the passenger side.



Step 12: Remove the 8 mm nut located at the top of the taillight assembly.

Repeat step for passenger side.




Step 13: pull the taillight stright out.



Step 14: Remove the wire hareness from the taillight assembly.



Step 15: Remove the two bulbs from the biege sockets.

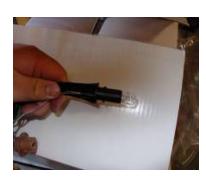

Note: Do not remove the bulb from the revesre light socket.



Step 16: Remove the clip located at the bottom of the stock taillight.



Step 17: Connect the clip to the ANZO LED tailllight.



Step 18: Mount the resistor in a safe place were water will not get to it.



Step 19: Connect the pigtail from the taillight to the stock wire harness.

Make sure to match the ground to ground.



Step 20: Connect the pigtail from the taillight to the stock wire harness. Make sure to match the ground to

Make sure to match the ground to ground.



Step 21: slide the ANZO LED taillight into place and check fittment.



Step 22: Ckeck all before reinstalling the bumper and the hardware.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.